

Z-E3756



INFOTAINER USER MANUAL



Device user manual for ZENEC media system

We are delighted that you have chosen a product from ZENEC.

Please read this operating manual before you start your new ZENEC system. In this device user manual you will find important instructions and information for the safe operation of the ZENEC system, and to help you make the most of its technical advantages.

All the information in this manual corresponds to the state at the time of going to press, and applies only to ZENEC systems in original condition. On account of possible updates to device software, the illustrations and features shown in this operating manual may be different from your ZENEC system. Differences in the information, illustrations or features cannot form a basis for any claims.

If you sell your vehicle with the ZENEC system still fitted, please ensure that this operating manual stays with the vehicle, and that any personal data like a phonebook stored in the device is deleted.

CONTENTS

SAFETY INSTRUCTIONS	
TURN DEVICE ON AND OFF	05
ANTI-THEFT PROTECTION	05
MULTIFUNCTION STEERING WHEEL CONTROLS	06
Z-E3756 (FRONT PANEL)	07
REMOTE CONTROL	8
MAIN MENU STRUCTURE	09
MAIN MENU ICONS	10
MEDIA AUDIO SOURCES	11
INPUT SOURCES	12
STATUS BAR	13
SEARCH AND INPUT FUNCTION	14
FM RADIO	15
FM BAR GRAPH MODE	16
MANUAL FM STATION SEARCH	
FM SETUP	
FM STATIONS-PRESETS	
DAB+ RADIO SETUP	
DAB+ ENSEMBLE AND STATION LIST	
DAB+ SETUP	
DAB+ STATIONS-PRESETS	
USB / BT A2DP / IPOD / DVD (AUDIO) MEDIA	
USB / BT A2DP / IPOD / DVD (AUDIO) MEDIA CONTROL AND OPERATION BAR	
BT-MUSIC (A2DP)	
iPOD (AUDIO)	
PLAYLIST (AUDIO)	
SMART PLAYLIST (AUDIO)	
FAV PLAYLIST (AUDIO)	
VIDEO MEDIA: HARDDISK / DVD	
PLAYLIST (VIDEO)	
HDMI / AV/IN	
CAMERA	
USING ANDROID AUTO	
ANDROID AUTO OPERATION	36-37

BLUETOUTH (HANDS-FREE SYSTEM)	
CONTROL AND OPERATION BAR (RIGHT)	39
DEVICE MANAGER	40
PAIRING	41
BLUETOOTH SETUP	42
BLUETOOTH STATUS BAR	
ACCEPTING/ENDING INCOMING CALLS (VIA DEVICE)	
OUTGOING CALL VIA NUMERIC PAD	
OUTGOING CALL VIA PHONEBOOK.	
BLUETOOTH MENU	
PHONEBOOK	
CALL LISTS	
REMOTE CONTROL APP FOR SMARTPHONES	40 47
FAVORITES.	
MULTIZONE (REAR SEAT ENTERTAINMENT)	
,	
NAVIGATION	50
NAVIGATION UPDATE	
MAPS (EXAMPLES)	
NAVIGATION START UP INSTRUCTIONS	52-53
NAVIGATION START OF INSTRUCTIONS	
SETUP OPERATIONS	55
DISPLAY ICON (BRIGHTNESS)	
SETUP OF SOURCES	
BT / NETWORK SETUP	
MISC SETUP	
AUDIO SETUP	
VOLUME SETUP	
QUICK AUDIO SETUP (BAL/FAD_SUBWOOFER_LOUDNESS_BASS BOOST)	62
AUDIO SETUP: EXPERT MODE	
AUDIO VOLUME – BASE LEVEL SETUP	
BALANCE / FADER	
EQUALIZER	
X-OVER SETUP	
SUBWOOFER SETUP	
TIME ALIGNMENT	
NAVI-MIXER SETUP	
TFT DISPLAY CONFIGURATIONS	
CAR (VEHICLE) SETUP	
INPUT SETUP	
SYSTEM SETUP	
CLOCK & DATE SETUP	
SOFTWARE VERSION	
PASSWORD	77
INSTALLATION NOTES	79
REMOVAL WORK AND PREPARATION	70 79
OVERVIEW INCLUDED ACCESSORIES	
COMMISSIONING.	
CONNECTION DIAGRAM Z-E3756	
ABBREVIATIONS	
STATUTORY DIGUTE AND WARD ANTY	

DI LICTOOTII (ILANDO EDEC OVOTEM)

SAFETY INSTRUCTIONS

△ CAUTION

If the driver of the vehicle is distracted, this may lead to an accident or injury. Operating the ZENEC system can distract attention from the general traffic situation! Equally, connecting, changing or inserting data media can distract the driver from the general traffic situation.

△ CAUTION

Always choose loudspeaker settings such that acoustic signals coming from outside can always be heard in the vehicle (e.g. signal horns or sirens).

⚠ CAUTION

Incorrect installation or commissioning of the ZENEC system may cause damage to the ZENEC system or to the vehicle electronics. Only let qualified specialists authorized by ZENEC install the device.

⚠ CAUTION

This ZENEC system is intended solely for operation at an on-board voltage of 12 V DC. Operating the ZENEC system at any other voltage can cause damage to the ZENEC system or to the vehicles electrical system.

A CAUTION

Taking apart or modifying the ZENEC system can result in damage to the device or the vehicle. Opening the device or modification by a person not authorized by ZENEC will render warranty claims null and void.

In the event of a malfunction or defect please contact an authorized ZENEC dealer. Unauthorized repairs will void any warranty claim.

▲ CAUTION

The connection and charging leads of external mobile devices can get in the way of the driver. Please run these so that the driver's freedom of movement is not hindered.

A CAUTION

Route recommendations and displayed traffic signs on the ZENEC system may differ from the real situation. Real traffic signs and traffic regulations have precedence over route recommendations and indications of the ZENEC system.

Speed data displayed in the navigation system corresponds to the permitted speed limit. Please adjust your speed and driving behavior to the prevailing visibility, weather, road, and traffic conditions.

TURN ON / OFF

See page 7 and item ① for the location and manual operation of the left rotary encoder with Power ON / OFF function.

Auto ON / OFF

Z-E3756 devices mounted in vehicles without factory installed SWC: Device will switch on with ignition (ACC) position of key*.

Z-E3756 devices mounted in vehicles with OE SWC and additional Stalk interface: Device will switch on with ignition (ACC) position of key*.

I NOTE

For vehicles equipped with OE steering wheel controls, a separate Stalk interface is required (not part of this kit).

*The ACC ignition key may not auto start the device, depending on the presence of a second 12V battery in the vehicle and the brand specific electrical power cable routing and system connection of auxiliary components.

Further info may be obtained by the vehicle maker or an authorized ZENEC dealer.

ANTI-THEFT PROTECTION

The ZENEC system is equipped with an anti-theft protection function. If this is active, on restarting the ZENEC system after interruption of the power supply you will be asked to enter your password.

To change the password:

Device User Manual → Setup → Device Setup → Password

i NOTE

Keep your password safe. If the password is lost the ZENEC system must be uninstalled, and sent back in to ZENEC Service to unblock the anti-theft protection. The unblocking service is not free of charge!




4 Rev.A 5 Rev

MULTIFUNCTION STEERING WHEEL

Until model year 2015


As of model year 2015 >

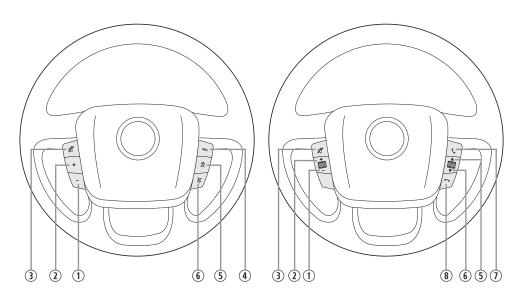

Item	Function			
1	Reduce volume			
2	Increase volume			
3	Mute	Mute		
4	Change playback source			
	Radio source	Press to choose the next radio station.		
5	Media source	Press to choose the next track/title. Press and hold to fast forward.		
	Radio source	Press to choose the previous radio station.		
6	Media source	Press to choose the previous next track/title. Press and hold to fast rewind.		
7	Accept call			
8	Reject/End call			

i NOTE

These functions can only be used when a multifunction steering wheel is present in the vehicle, and the ZENEC system is connected via a car specific CAN/Stalk interface.

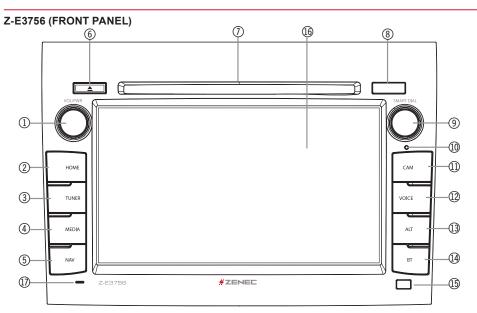


Device Front Panel Control Options

14	laan	ontrol Options
Item	Icon	Function
1		Turn to increase or decrease playback volume Press and hold to turn device ON or OFF
'		Press to mute/- unmute device
2	HOME	Press to jump back to main menu
		Press and hold jump to audio settings
3	TUNER	Press to open radio source
4	MEDIA	Press to open media source
5	NAV	Press to jump to navigation
0	10.11	Inside navigation source: Short press open Quick-Media-Control-Bar
6		Press, to eject the CD/DVD
7		CD/DVD slot
8		microSD card slot for GPS navigation software behind "MAP" cover
	Z) SMALL CALL	Turn for list scrolling
9		Press to confirm a selection
		Turn for navigation MAP Zoom IN/-OUT
10	0	Hole in the panel for the reset pin
11	CAM	Press to enter camera source
		Press again to switch the CAMERA input channel (CAM1 -> CAM2 -> CAM3)
40	VOICE	Press to start the Android voice control. Tap once more to cancel the voice
12	VOICE	control. Press and hold to restart the voice input.
		Press to select preferred content or execute a function
13	ALT	Press and hold to jump to audio settings
14	ВТ	Press to open the Bluetooth suite
15		IR receiver for remote control
16		Touchscreen display

6 Rev.A 7 Rev.A

REMOTE CONTROL

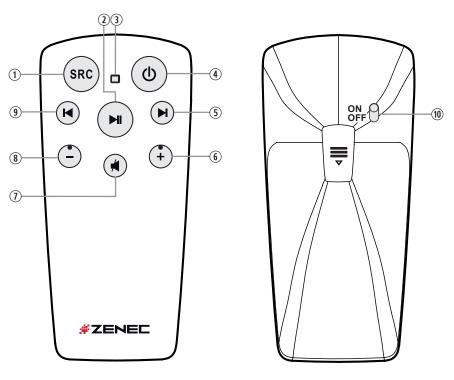


Item	Function	
1	Change playback source	
2	Play/Pause	
3	LED	
4	Turn on/off device	
	Radio source	Press to choose the next radio station
5	Media source	Press to choose the next track/title Press and hold to fast forward
6	Increase volume	
7	Mute / unmute	
8	Reduce volume	
	Radio source	Press to choose the previous radio station
9	Media source	Press to choose the previous next track/title Press and hold to fast rewind
10	Turn on/off remote control	

MAIN MENU STRUCTURE



Main menu with 3 Icons

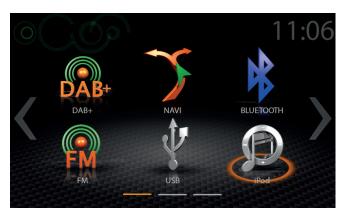

Main menu with 6 Icons

The icon amount show per main menu page can be adjusted in the setup (see page 59 "Main Menu Style").

Display - touch sensitive operation Bedienung

Function	Icon	Operation
Slide	<<< \(\text{\(\ext{\) \}}\eta}\eta\text{\(\text{\(\text{\(\text{\(\text{\(\text{\) \eta\text{\(\eta\text{\(\eta\text{\(\eta\text{\) \}}\eta\text{\(\eta\text{\(\text{\(\eta\text{\(\eta\text{\(\eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\(\eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\) \eta\text{\(\eta\text{\} \eta\text{\} \eta\text{\(\eta\text{\} \eta\text{\} \text{\ \eta\text{\} \eta\text{\ \eta\text{\} \eta\ \eta\text{\ \eta\text{\(\eta\text{\ \eta\tex{\ \eta\texi{\ \eta\text{\ \eta\text{\ \eta\text{\ \eta\tex{	Swipe to navigate in the main menu by sliding page to the left or right
Move		Press and hold to move an icon into the desired position

MAIN MENU ICONS



You can navigate through main menu pages by swiping or tapping on the orange page markers in the bottom area of each page.

Function	Icon	Operation
Navi	7	Tap to open navigation App
Bluetooth		Tap to open the Bluetooth suite
Tuner (FM)	FM	Tap to open FM radio source
USB	P	Tap to enter USB source
iPod	S	Tap to open audio playback source (Apple)
BT-Music		Tap to open BT-Music source
DAB+	DAB+	Tap to open DAB+ radio source

MEDIA AUDIO SOURCES



You can access / enter connected internal or external sources by tapping on the main icon according to the following list.

Function	Icon	Operation
USB	P	Tap to enter USB source
iPod	Fod IPod	Tap to open audio playback source (Apple)
BT-Music		Tap to open BT-Music source
Android Auto	ANDROIDAUTO	Tap to start Android Auto
Tuner FM	P	Tap to open FM radio source
DAB+	DAB+	Tap to open DAB+ radio source
HDMI		Tap to open HDMI source
DVD	DVD	Tap to enter DVD source

10 Rev.A 11 Rev.A

INPUT SOURCES



To select and open external sources like HDMI, Camera, AV/IN or Android Auto, they need to be paired or physically connected to the device.

Input Sources

Function	Icon	Operation
НДМІ	THE REAL PROPERTY OF THE PARTY	Tap to open HDMI source
Camera		Tap to enter camera source
Android Auto	ANDROIDAUTO	Tap to start Android Auto
AV/IN	AV/IN	Tap to open AV/IN source

i NOTE

Icons in the main menu remain greyed out for sources not connected to device.

STATUS BAR ("INFO BAR")



The "info bar" in the upper hand screen area shows TA, volume and time but also contains two important controls for device operation: BACK (left side) and ALT (right side).

Function	Icon	Operation
Back	\ll	Tap to jump one level up or back
Clock Time	16:04	Display of time (no interaction possible)
Traffic Announcement	TA AF	Traffic announcement of FM radio (if function is set to active)
Volume	4))) 16	Shows the current playback volume
ALT	ALT	Tap to select / start a previously assigned function Settings → Misc → ALT Softkey button
No DAB Signal	P	This icon indicates that no DAB signal, or no DAB antenna is connected to device.

12 Rev.A 13 Rev.A

SEARCH AND INPUT FUNCTION



The keyboard for search and input is based on the Android OS system layout. The system language selection will automatically assign QUERTY or QWERTZ layout.

Function	Icon	Operation
Search	Q Search	Cursor and text input field
Delete	•×	Tap to delete a number, letter or sign
Delete		Press and hold to delete the full string
Back	((Tap to end the search or the input
Lorge / Small		Tap to select small / capital letters for entries
Large / Small	<u> 11</u>	Tap twice to write all letters or numbers in capital style
List view	Done	Tap to show all search results/- full list
Open keyboard	Q	Tap to open the keyboard

FM RADIO



The FM RDS source menu offers a control-/operating section on the right hand side, for fast and convenient adjustments during the FM radio playback.

Center Section of Display

Function	Icon	Operation
Station freq search up		Tap to start the auto FM station search, running up in the frequency band
Station	87.50 MHz	Station Name / Station Frequency
Station freq search down		Tap to start auto FM station search, running down in the frequency band
Cover		Shows radio station graphics or cover picture of artist
Info display area	<<< \(\) >>>	Finger swiping left and right to access stored FM stations previous / next

Control- and Operating Section

Function	Icon	Operation
Info	i	Tap to show station information
Frequency Scale		Tap to open FM station frequency bar
Preset	Preset	Tap to show the stored FM station list
Tuner Setup		Tuner settings
TA	TA	Tap to activate or de-activate the auto switching of RDS traffic announcements
FM / DAB Switch	DAB→	Tap to switch to DAB
		15 Rev.Ā

FM BAR GRAPH MODE



The FM setup mode (press gear icon) allows to assign two different operation modes to both station frequency arrows: manual steps in 100kHz, or auto scan (stopping at next station). See page 18.

Function	Icon	Operation
Station Frequency UP	No.	Tap to start manual 100kHz jump, or FM station auto search up
Station Frequency Input	87.50 _{MHz}	Tap to open the frequency direct input mode keyboard
Station Frequency DOWN	10	Tap to start manual 100kHz jump, or FM station auto search down
Bar Graph Scale	88	Press and hold to slide the frequency pointer of the bar graph into any position. Tap to set a desired frequency value on the scale

MANUAL FM STATION SEARCH



When you tap to the frequency display area, the numeric input keyboard opens for a direct station frequency input.

Function	Icon	Operation
Station Frequency UP		Tap to auto seek / manual seek up, depending on setting
Station Frequency	87.50 _{MHz}	Tap to open and close station direct frequency input via keypad
Station Frequency DOWN	10	Tap to auto seek / manual seek down, depending on setting
Scale	88 FM	Radio frequency scale display
Delete		Tap to delete a number Press and hold to delete the full text string
Keypad	1 2 3 4 5 6 7 8 9	Direct frequency input option
ОК	OK	Touch to confirm frequency

16 Rev.A 17 Rev.A


FM SETUP



Here you can set important FM RDS based settings such are AF and REG.

Function	Icon	Operation
AF	AF	Alternative Frequency ON / OFF
REG	REG	Setting to keep AF in the regional (local) station tuning mode.
SCAN	SCAN	Setting to choose the automatic or manual station frequency search.
ТА	TA	Tap to activate or de-activate the auto switching of RDS traffic announcements

FM STATIONS-PRESETS

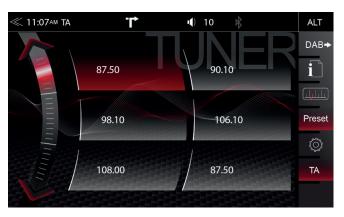

Select a previously stored FM radio station by tapping on the station preset button.

Function	Icon	Operation
Previous page		Tap to switch to previous preset page
Next page		Tap to switch to next preset page
Select station / Store a station	PUNK RAD	Tap to select a previously stored radio station. Press and hold the station to save an actual radio station on any of the station preset buttons

DAB+ RADIO



The DAB+ source menu offers a control- + operating section on the right side of the display, allowing for simple and convenient direct adjustments of DAB+ functions in the playback menu.

Function	Icon	Operation
Station up	ABY	Tap to jump to next station Press and hold to jump to next Ensemble
Station info	1XTRA BBC Live Lounge Sessions	Station Name / Ensemble name
Station down		Tap to jump to previous station Press and hold to jump to previous Ensemble
Slideshow	SWR1 Leville Inhibitor Kinder Inhibitor Kinder Jetzt Huft Jetzt Huft Don't step	Radio station artwork / artist display ("MOT Slideshow")
Info Display Area	<<< p>****	Finger swiping left and right to switch between Preset stations

Control- and Operating Section

Function	Icon	Operation
FM / DAB+ Switch	FM→	Tap to switch to FM tuner source
Info		Tap to show station information - main display
List		Tap to open the station list (showing all currently receivable radio stations in the area)
Preset	Preset	Tap to show the stored DAB station list
Setup		Tap to change settings for DAB+ functions

DAB+ ENSEMBLE AND STATION LIST



Once the first DAB+ band scan has completed, device will show all DAB+ Ensembles and radio stations of sufficient signal strength. The Ensemble list and its content is auto updated periodically.

Function	Icon	Operation
Ensemble list selection	SV	Tap to open an Ensemble, showing the assigned DAB+ radio station list
List scrolling		Press and hold to move the slider of the Ensemble list up and down
Back	\parallel	Tap to jump one level back or up




A tap on each Ensemble opens the related DAB+ station list of the respective Ensemble. The station list content follows exactly the original Ensemble display format and list sequence.

Function	Icon	Operation
Radio station selection	T DAB SUN	Tap to select one particular radio station out of the list
List scrolling		Press and hold to move the slider of the station list up and down

20 Rev.A 21 Rev.A

DAB+ SETUP

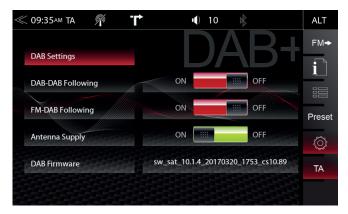

The setup page for the DAB+ tuner allows to define important functions such as DAB<>DAB and FM<>DAB station following. And also to activate the phantom power supply voltage of the DAB antenna socket.

Function	Icon	Operation
DAB-DAB Following	DAB-DAB Follow	Tap to turn DAB-DAB station following ON or OFF
FM-DAB Following	FM-DAB Followin	Tap to turn FM-DAB station following ON or OFF
DAB antenna socket phantom power	Antenna Supply	Tap to turn the 12V phantom power supply of the DAB antenna socket on the device backside ON or OFF
DAB Firmware	DAB Firmware	Displays the current DAB+ Firmware version

i NOTE

The FM-DAB Following function works with a static function algorithm. This may or may not deliver good switching results, depending on the broadcast region.

DAB+ STATION-PRESETS



Select a previously stored DAB+ radio station by tapping on the station preset button.

Function	Icon	Operation
Previous page		Tap to switch to previous preset page
Next page		Tap to switch to next preset page
Select station / Store a station	PUNK RAD	Tap to select a stored DAB+ station. Press and hold the station to save the actual radio station on any of the station preset buttons

22 Rev.A 23 Rev.A


USB / BT A2DP / iPOD / DVD (AUDIO) MEDIA



Various types of information shown in the source menu of the audio playback by (USB, BT A2DP, iPOD, etc.).

Function	Icon	Operation
Album Art / Cover	pro dance	If a cover is stored on the music media, it will be displayed. This function is not supported for BT Audio playback.
Artist	8	Information about the artist
Track	A	Information about the track
Album	②	Information about the album
Genre	i	Information about the genre or any other special infos
Back		Tap to skip to the previous track Press and hold to start fast reverse
Dack	<<< o,>>>	Swipe to the left to skip to the previous track
Play	\triangleright	Tap to play a track
Pause		Tap to pause at a track
Forward		Tap to skip to the next track Press and hold to start fast forward
	***	Swipe to the right to skip to the next track
Playback Time Line	0:38	Tap or slide to skip within a track

USB / BT A2DP / iPOD / DVD (AUDIO) MEDIA CONTROL AND OPERATION BAR

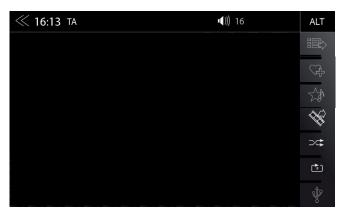

The control and operation bar on the right side of the audio playback media menu continues to play lists, favorites, and external USB memory.

Function	Icon	Operation
Playlist		Tap to display the folder and track list This function is not supported for BT Audio playback.
Smart Playlist	公	Tap to add a track to own playlist This function is not supported for BT Audio and iPod
Favorites		Tap to add a track to FAV playlist This function is not supported for BT Audio and iPod
Video <-> Audio Source		Tap to switch between audio or video playback. This function is not supported for BT Audio and iPod
Shuffle	>< >	Tap to turn on the random play feature within the folder that is playing
Repeat	*	Tap to automatically repeat a track or a complete music collection
Source	Ŷ	Touch to jump to next available source (Available sources USB, iPod, DVD and BT-Music)

24 Rev.A 25 Rev.A

BT MUSIC (A2DP)



The A2DP RVC interface offers Play, Pause and Skip control of previously paired smartphones in audio playback mode. The iD3-Tag meta data display is possible only when tag data is contained in the streamed music track.

i NOTE

The listed functions depend on the paired mobile phone, installed software versions and the degree of compatibility.

iPOD (AUDIO)



The order of the Artist display is given by the sorting sequence on the mobile Apple device and can not be changed or adapted in any way.

PLAYLIST (AUDIO)



There are different playlists. We generally differentiate between the standard and special playlists (Smart Playlist and Favorites Playlist).

Function	Icon	Operation
Folder (uppermost)	☐ 30 Sec	Tap to go to the next higher level
Folder		Touch to go to the highest folder level Hold to go to the hard disk overview (root)
Song	A	Listing by song
Artist	8	Listing by artist
Album	⊗	Listing by album
Smart Playlist		Tap to access the Smart Playlist (Shows created Playlists)
FAV List		Tap to access the FAV playlist
Search		Tap to open search keypad
Scroll		Scroll in the list: Touch and hold to move the slider up or down Tap and hold your finger on the list to move the list up or down


SMART PLAYLIST (AUDIO)



This function allows you to manage the playlists which created by the Smart Playlist function. The playlists can be renamed.

Function	Icon	Operation
Playlist name field	Smart	Tap to go to the next higher level
	4	Tap to edit a playlist (editing mode)
Playlist	≣ Delete	Tap to delete a playlist
editing mode	Rename	Tap to rename a playlist
		Tap to cancel playlist edit mode
	4	Tap to edit a song within a playlist (editing mode)
Song	Delete	Tap to delete a playlist song
editing mode	Add to	Tap to move a song of the playlist (Add a song to another playlist)
	S Cancel	Tap to cancel edit mode
Scroll		Scroll in the list: Touch and hold to move the slider up or down Tap and hold your finger on the list to move the list up or down.


FAV PLAYLIST (AUDIO)

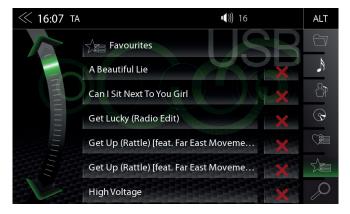

This playlist feature allows you to add a song easily and quickly to a fixed favorite playlist.

Function	Icon	Operation
Playlist name field	Favourites	No function, text field only. Note: The name of the FAV playlist can not be changed.
Delete	X	Tap to delete a FAV playlist song
Scroll		Scroll in the list: Touch and hold to move the slider up or down Tap and hold your finger on the list to move the list up or down.

VIDEO MEDIA: HARDDISK / DVD

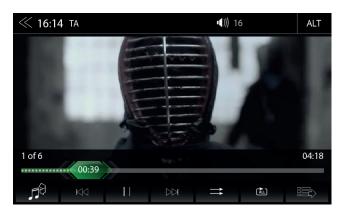


For video playback via USB or DVD parking cable must be connected during the device installation. Without this connection, the screen remains black.

Function	Icon	Operation
Jump inside Title	00:39	Tap to skip directly to the desired position Slide to reach the desired position
Video<->Audio Source		Tap to switch between audio or video playback. This function is not supported for BT Audio and iPod
Back		Tap to skip back to the previous section
Play	\triangleright	Tap to play a film
Pause		Tap to pause a film
Forward		Tap to skip forward to the next section
Playlist		Tap to display the folder and track list This function is not supported for BT Audio
Shuffle	\Rightarrow	Tap to turn on the random play feature within the folder that is playing
Repeat	ÂLL	Tap to automatically repeat a film or complete video collection

30 Rev.A 31 Rev.A

PLAYLIST (VIDEO)

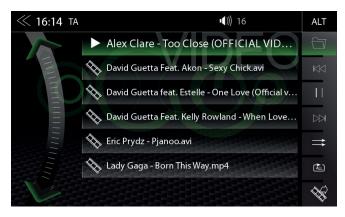

Playlist (Video) displays the video files on the USB data carrier with their file name. In this list sliding up or down is easily possible.

Function	Icon	Operation
Folder		Touch to go to the highest folder level Hold to go to the hard disk overview (root)
Back	KK	Tap to skip back to the previous section
Play / Pause		Tap to play a film or a video Tap to pause a film or a video
Forward	KK	Tap to skip forward to the next section
Shuffle	\Rightarrow	Tap to turn on the random play feature within the folder that is playing
Repeat	ÂLL	Tap to automatically repeat a film or complete video collection
Video <-> Audio Source	*	Tap to switch between audio or video playback. This function is not supported for BT Audio and iPod
Scroll		Scroll in the list: Touch and hold to move the slider up or down Tap and hold your finger on the list to move the list up or down

⚠ CAUTION

Playing video files while driving is not permitted by the law. For this reason the screen will switched off when the vehicle is in motion, with the playback of sound only.

HDMI / AV/IN



Tap on the HDMI icon to open the HDMI source, if a compatible HDMI source is connected, for example a videogame, smartphone, tablet, notebook.


Function	Icon	Operation
НДМІ	TIME TO SERVICE TO SER	Tap to open HDMI source mode

Tap to the AV/IN icon to open the AV/IN source, if a compatible AV/IN source is connected, for example a videogame, smartphone, tablet, notebook.

Function	Icon	Operation
AV/IN	50 G	Tap to open AV/IN source mode

32 Rev.A 33 Rev.A

CAMERA

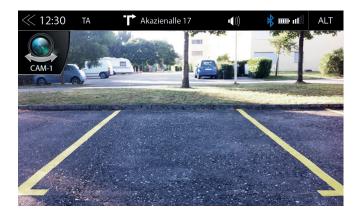

Tapping the camera icon starts the manual camera mode, when a CVBS type camera is connected to the camera input of the unit.

Function	Icon	Operation
Camera		Tap to open camera source
Camera switching	CAM-1	Tap to switch sequentially through all three cameras (CAM-1 > CAM-2 > CAM-3) Same control operation also possible by SmartDial short press

ANDROID AUTO



With Google Android Auto, you are be able to access compatible apps and online services of your Android smartphone in your motor home and operate them intuitively with the display of your ZENEC device or the voice assistant from Google.

USING ANDROID AUTO

PREPARATION:

- · Download the Android Auto app from the Google Play Store.
- · Connect the Android smartphone with the USB connector of the ZENEC device.
- To use the hands-free function of Android Auto, connect the Android smartphone with the ZENEC device via Bluetooth. Please pay attention to chapter "Bluetooth (Hands-free System) → Pairing".


INITIAL OPERATION:

- 1. For the initial operation, the vehicle must not be in motion and the hand brake must be put on.
- 2. Tap to the Android Auto icon in the main menu of the ZENEC device to choose the Android Auto source
- 3. Follow the dialogue on the display of the ZENEC device to install Android Auto and to configure the start behaviour. It is possible to change the selected start behaviour in the setup operations anytime later. Please pay attention to chapter "Setup Operation → Misc → Launch Android Auto".
- 4. After the initial operation has been completed successfully, the Android Auto user interface appears on the screen of the ZENEC device.

34 Rev.A 35 Rev.A

ANDROID AUTO

OPERATION:

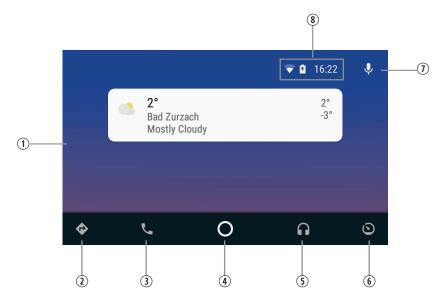

Item	Icon	Operation
1	of No. 1 and A and the state of	Android Auto user interface
2	�	Navigation
3	L	Telephony
4	O	Open Android Auto user interface
5	n	Media playback
6	0	Open ZENEC main menu
7	.	Activate Android Auto voice control
8	▼ 16:22	Smartphone status information (can vary depending on the model)

ANDROID AUTO

i NOTE

- Android Auto may not be available on all devices and is not available in all countries and regions.
- To use Android Auto with your Android Smartphone, at least Android 5.0 (Lollipop) or a higher version of the Android operation system must be installed on your smartphone.
- To use Android Auto on your ZENEC device, you have to adjust time and date on your ZENEC device correctly. Please pay attention to chapter "Setup Operations → System → Clock & Date Setup".
- For more detailed information about Android Auto, please visit https://www.android.com/auto/ and https://support.google.com/androidauto#topic=6348027

36 Rev.A 37 Rev.A

BLUETOOTH (HANDS-FREE SYSTEM)

ABOUT THIS CHAPTER

This chapter describes how to operate and use the hands-free system. In addition, the BT setup and functions of the ZENEC BT system are described.

SAFETY INSTRUCTIONS

△ CAUTION

Operating the mobile phone with the hand while driving is not permitted. Only enter data or make changes via the ZENEC system when vehicle is parked, or traffic situation allows such actions.

▲ CAUTION

Network coverage depends on a number of factors – such as the network provider, or the geographical position of the vehicle. Tunnels, underpasses, parking garages, or street canyons in cities may lead to interruption of the connection. Thermal glazing or metallic stickers on the windows of the vehicle may also disrupt the connection of the smartphone to the GSM network.

CONTROL AND OPERATION BAR (RIGHT)



The vertical control and operation bar on the right area of the Bluetooth page serves to invoke device manager, or access phone book, favorites, call logs, numeric keypad, Bluetooth settings and Scan (BT device search).

Function	Icon	Operation
Device manager		Tap to access the device manager page
Phonebook		Tap to access the phonebook of the currently paired mobile phone
Favorites		Tap to access the stored favorites
Call logs		Tap to access the call logs
Numeric pad		Tap to open the numeric keypad
Bluetooth setup		Tap to change the most important settings for BT operation
Scan (Search)	Scan	Tap to search for a new Bluetooth device

38 Rev.A 39 Rev.A

DEVICE MANAGER



The BT function on the device must be activated to invoke connection process. Please pay attention to the smartphone manufacturer's instructions regarding device pairing.

Function	Icon	Operation
Device manager		Tap to pair, disconnect, or manage mobile devices

Function	Icon Operation	
Pair		Tap to reconnect a paired Bluetooth device
Disconnect		Tap to disconnect a paired Bluetooth device
Delete	X	Tap to delete a Bluetooth device from the list (requires the device to be disconnected)

Icon	Meaning
	This icon indicates that the paired Bluetooth device supports HSP/HFP, and can be used via the hands-free system.
	This icon indicates that the paired external Bluetooth Speaker supports SBC/A2DP, and can be used via the hands-free system for Audio Streaming.

PAIRING



To connect a smartphone to the Zenec device via Bluetooth, first step is to successfully complete the pairing process.

Via ZENEC system

Function	Icon	Operation
Scan (Search)	Scan	Tap to the SCAN icon to initiate a search for BT devices. From the list select the desired mobile device that you want to synchronize with the ZENEC system. Once device is selected, follow the instructions.
Code		Standard Code*: 0000 or 1234

i NOTE

*For mobile devices that do not support the SSP standard

Via the mobile device

Function	Icon	Operation
Search		Make sure that the ZENEC system is in Device Manager view otherwise the ZENEC system will not be visible to other devices. Follow the instructions of the device manufacturer on pairing.

Auto Connect

Once a mobile device has been connected with the ZENEC system, it will be automatically paired when the ZENEC system is started. On being briefly disconnected the ZENEC system will attempt to establish a new connection.

i NOTE

On pairing for the first time, be sure to permanently enable the connection confirmation on your mobile device, otherwise malfunctions may occur during the Auto Connect process.

40 Rev.A 41 Rev.A

BLUETOOTH SETUP




On the Bluetooth setup page you can adjust settings for Bluetooth operation. Press the appropriate button / field to change any of the listed settings.

Function	Icon	Operation
Bluetooth Settings		Tap to change settings for BT operation
Auto Connection	ON [;;;]	ON / OFF
Contacts Order	First Name	by first name of contact by surname of contact
Microphone	Int.	Internal = inside device External = only if installed
Microphone Gain	2	Touch to set the Mic. gain from 1 to 3

BLUETOOTH STATUS BAR

Icon	Function
*	Mobile phone currently connected
	Battery capacity of the mobile phone currently connected
111	Signal strength of the current mobile network
EXT	BT A2DP Source Mode Indicator, if A2DP (SRC) mode is active (Audio signal transmission to external Bluetooth speakers or head phones)

ACCEPTING/ENDING INCOMING CALLS (VIA DEVICE)

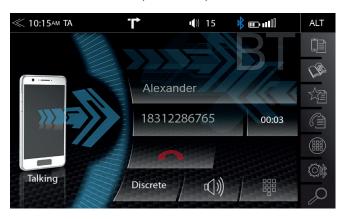

Function	Icon	Operation
Accept		Tap the green handset to accept the call
Reject		Tap the red handset to reject the incoming call
End		Tap the red handset to end the call

DIAL A CALL USING NUMERIC PAD

In the control-/operation panel touch the to open the numeric pad.

Key in the desired phone number in full using the numeric pad. To establish the connection, touch Γ . The display now changes to the call connection view.

DIAL A CALL USING PHONEBOOK

In the control-/operation panel touch the to open the phonebook.

From the phonebook list select a call partner and set up a connection by touching \mathcal{C} . After touching a contact you will be directed to the contact details view.

i NOTE

Depending on the existing numbers of mobile phone and phonebook entries, the first synchronization can take several minutes.

42 Rev.A 43 Rev.A

BLUETOOTH MENU

Function	Icon	Operation
Discrete	Discrete	Touch to pass the call from the hands-free system to the mobile phone or vice versa
Mute conversation		Mute / un-mute the microphone input
Numeric key pad	000	Tap to show the numeric key pad Necessary in case asked to enter a further number during the call (telephone call center etc.)
Back	<<	Tap to jump back to the previous level

i NOTE

To be able to use the phonebook or call lists without any problems, make sure that during the pairing process you confirm data access enable on the smartphone.

PHONEBOOK

Contacts



After successful pairing of the smartphone with subsequent phone book synchronization, the device will show you the full contact list. You can directly add contact Favorites.

Function	Icon	Operation
Search	\mathcal{Q}	Tap to open the contact search keypad
Scroll		Scroll in the list: Touch and hold to move the slider up or down, showing letters by the alphabet.
Phonebook Contacts	C.	Tap to jump to the contact list. Up to 1000 contacts per paired mobile phone can be synchronized; it makes no difference whether the contacts are stored in the phonebook or on the SIM card.
Conctact List		Tap to to show phone numbers of the respective contact entry
Call / Accept	C	Tap the green handset to set up/- start the call
Add Favorite	$\stackrel{\wedge}{\sim}$	Tap to add a new Favorite Tap once more to remove a Favorite

44 Rev.A 45 Rev.A

CALL LISTS



If a compatible mobile phone is connected, call lists from the mobile phone will be synchronized with the BT hands-free system (process can take some minutes, depending on the number of contacts). Once sync process has completed you will be able to access the following logs:

Function	Icon	Operation
Call logs		Tap to see all call logs
Missed Calls		Tap to see the missed calls only
Received Calls		Tap to see the received calls only
Dialled Calls		Tap to see the dialled (outgoing) calls only

Function	Icon	Operation
Missed	CES -	Entries with this icon refer to calls that you missed
Incoming	C 5	Entries with this icon refer to accepted incoming calls
Contacted		Entries with this icon refer to outgoing calls

REMOTE CONTROL APP FOR SMARTPHONES



With the ZENEC SP-REM app for iOS and Android smartphones, audio functions (Volume, Play, Pause, Stop) and audio source switching of the Z-E3756 can be controlled quite conveniently.

To be able to update your Smartphone with ZENEC SP-REM app, proceed as follows:

- 1. Go to your official Android Google Play Store and search for the "ZENEC SP-REM app"
- 2. Install the ZENEC Remote Control App for Smartphones



i NOTE

While using the Remote Control App, be sure that your smartphone is successfully connected to the ZENEC device via Bluetooth, otherwise operating audio remote control functions is not possible.

46 Rev.A 47 Rev.A

FAVORITES



On this page you can link eight or more phone numbers to become favorites. You can select any of the phone numbers in the phonebook and save them as Favorites; the only exceptions are e-mails and addresses.

i NOTE

All Favorites are visible to every user of the device as they are saved in the device memory.

Function	Icon	Operation
Stored Favorite	New 4916271	Tap to set up/- start a connection with a stored Favorite
Assign New		① Tap to add a new favorite contact
Favorite		② Select desired number from phonebook and confirm with this ☆ icon
Delete	×	Tap to remove a stored Favorite

i NOTE

A change of data on the mobile phone will not sync automatically with the stored Favorites. Should you want to change phone numbers this change must be manually transferred to Favorites by deleting the exisiting Favorite and re-assigning the new number.

MULTIZONE (REAR SEAT ENTERTAINMENT)





Function	Icon	Operation
Close		Tap to close the M-Zone source selection
BT-SRC (EXT BT A2DP Source Mode)	EXT	Tap to activate or deactivate Ext. BT Source mode (Audio-Streaming to external Bluetooth speaker or headphone)
CD/DVD	DVD	Tap to access the DVD playback
A/V-IN	99 6	Tap to access the external audio/video
M-Zone OFF		Tap to switch off the M-Zone

DVD

If additional monitors are connected to the ZENEC system, DVD playback independent of the actual playback on the rear monitors is possible using this function.

A/V-IN

If additional monitors are connected to the ZENEC system, this combined audio/video input can be used to connect a wide range of external devices, and played independently of the actual playback at the additional monitors.

BT A2DP SRC Mode for BT Speaker

With this function the actual audio playback can be played /- streamed to external BT Speakers.

i NOTE

When using an external BT speaker, make sure that it is connected to your device via Bluetooth. Please see also the chapter Bluetooth for a successful pairing process.

49 Rev.A

48 Rev.A

NAVIGATION



For the ZENEC devices Z-E3756 a navigation package is available separately. This bundle comes with multilanguage Quickstart manual and navigation software on microSDHC card. The images shown on this and the following page, as well as instructions, are taken from this solution.

Function	Icon	Operation
Navigation	7	Tap to start navigation and show map view (only if microSD card of the Z-E3756 set is insert in the device)

NAVIGATION UPDATE

Activation of the free 36-month map software update period begins once the ZENEC system has been switched on and vehicle was driving over a distance of >10 km.

Requirements

- PC or notebook with a Windows 7 operating system or higher, an SD card reader, together with broadband Internet access. Apple OS not supported.
- 2. An activated navigation map microSD card (set content)
- Latest Naviextras Toolbox software, installed on your computer. Download-Link: https://zenec.naviextras.com/shop/portal/downloads

To update your ZENEC device with new maps, proceed as follows:

- Go to https://zenec.naviextras.com/shop/portal and set up a user account with a password and the personal data for your navigation device.
- Download the Toolbox Software: Naviextras Toolbox Download. Read through the application instructions before taking any further steps. The Toolbox is periodically updated. Therefore, should you want to make a map update at a later time, always download the latest Toolbox version. This will guarantee optimal compatibility of all data transfer functions.

i NOTE

Map updates can be carried out by visiting https://zenec.naviextras.com/shop/portal. Safety instructions: see page 4.



Fast and simple route calculation

MAPS



High resolution 3D maps



Advanced route guidance

NAVIGATION START UP INSTRUCTIONS

NAVIGATION SOFTWARE INSTALLATION

Before you can use the Z-N3756 navigation software supplied on microSD card, the Android device (Z-E3756) must be prepared by installing a software.

- a. Insert the provided mircoSD card with navigation software into the respective slot of the device. Turn on the device.
- b. Tap on the "navigation source icon" in the main menu to start the standard installation process (illustration 1).



Illustration 1

c. The software installation will run in a step-by-step mode. A visual animated software installation status bar allows you to track progress (illustration 2). The complete update process takes approx. 30 ~ 60 seconds.



Illustration 2

d. Finally, the navigation will be start automatically if the installation was successful. Device should show navigation loading mode (illustration 3). Now close the navigation software, turn off the device and read the info given under "Sat-Fix" below.



Illustration 3

NAVIGATION START UP INSTRUCTIONS

FIRST NAVI START-UP (SAT FIX PROCESS)

- After the device install is completed make sure, the vehicle is located outdoors under free sky. There should be no objects above vehicle affecting GPS reception (trees, tall buildings etc.).
- > Tap on the navigation icon in the main menu to start the navigation mode. Tap on "Show Map" to initiate the "search GPS" process.
- Allow 3 to 5 minutes of time to for the creation of the so called Sat-Fix. During this period, the vehicle must not move nor drive!

Online Updates (Map Content + Bugfixes)

Naviextras Toolbox is a Windows utility, able to establish the server access to the Naviextras portal.

- Before you update the navigation content of your microSD card, always download, install and use the latest Toolbox software.
- Before you can download content and updates you are asked for setting up a user account on the Naviextras portal. Once the Toolbox software has installed a login window pops open to indicate readiness for user account setup.
- With the user account ready make sure the first step is backing up the microSD card content prior to any content update. Data backup is offered automatically with Toolbox recognizing a valid nav license on the microSD card.
- Do not start update before you have not created a backup. The backup allows you to restore original map data of the package, which is a welcome help to cope with update or installation problems, which would otherwise become costly software restore processes.
- Important: When a free or pay type content update was installed on the microSD card, the following two steps must be completed to reactivate the license:
- Insert the microSD card into your naviceiver and start the navigation. Shut down device, remove the microSD card.
- 2) Start Toolbox and connect the microSD card to your PC or notebook and follow the instructions of the software (activation of license).

52 Rev.A 53 Rev.A

NAVIGATION SPLIT SCREEN



When you tap on the Placeholder, the Album Cover Art or MOT Slideshow area will activate/ deactivate the ZENEC Navigation-Split-Screen, which shows the current active route navigation turn info's.

Function	Icon	Operation
MediaPlayer Album Art / Cover	ZENEC Placeholder: Cover Art Example:	Tap to activate the ZENEC Navigation-Split-Screen in MediaPlayer (USB, iPod, BT-Music, DVD)
DAB Radio	ZENEC Placeholder: MOT Slideshow Example: PART LIVE TOTAL THE PROPERTY MARK FOR THE PRO	Tap to activate the ZENEC Navigation-Split-Screen in DAB Tuner source
FM Radio	ZENEC Placeholder:	Tap to activate the ZENEC Navigation-Split-Screen FM Tuner source
Navigation- Split-Screen (NAVI Turn Info's)	900 m Zürcherstrasse	Show the current active route navigation turn info's Tap to deactivate (disable) the ZENEC Navigation-Split-Screen

SETUP OPERATIONS



This chapter describes all the parameter and setting functions of the ZENEC system. Please note that settings or changed parameters can have a direct influence on the everyday use of the ZENEC system.

Function	Icon	Operation
Setup	00	Tap to access the setup mode

i NOTE

Software updates applicable to this device, except navigation engine and map updates are free of charge. Download here: www.zenec.com/support/software-updates/

54 Rev.A 55 Rev.A

DISPLAY ICON



With the display icon, the LCD TFT screen picture brightness can be dimmed or switched off (standby) in two steps. This is done by tapping the icon.

Function	Icon	Operation	
Disp		Tap to dim or brighten up TFT screen (\hookrightarrow 100% \rightarrow 50% \rightarrow 0% "standby" \hookrightarrow)	

SETUP OF SOURCES



When you tap the setup icon, you will enter this setup source page, which offers six different sources you can adjust for personal preferences.

Function	Icon	Operation	
BT/Network	BT/ Network	Touch to access hands-free system settings Touch to access Network settings	
Misc	Misc	Tap to access diverse device settings	
Audio	Audio	Tap to access sound settings	
TFT	TFT	Tap to access display settings	
Car	Car	Tap to access car settings (Park Assist etc.)	
Inputs	Inputs	Tap to access Video inputs settings (camera inputs)	
System	System	Tap to access system settings	

56 Rev.A 57 Rev.A

BT / NETWORK SETUP



In BT / Network Setup, you can make important changes for best Bluetooth operation. Tap on the ON / OFF button of desired field to effect a change.

Function	Icon	Operation	
BT/Network Settings	BT/ Network	Tap to access settings for BT operation	
Bluetooth	ON ::::	ON / OFF ON = Bluetooth module activated OFF = Bluetooth module deactivated	
BT-Voice Channel	Driver	Driver: Sound output of call is exclusively on the driver side. Front: Sound output of call is on both sides (in the entire front area).	
WiFi	WiFi	ON / OFF ON = WiFi activated OFF = WiFi deactivated	

MISC SETUP



In the Misc menu page, you can configure various settings. The display mode with 3 or 6 icons, ON/OFF of the beep sound, LED color (amber / white) of the button illumination on the device front.

Function	Icon	Icon Operation	
Misc	Misc	Tap to access basic settings view	
Main Menu Mode	3 Icon	Tap to switch to 3 Icon or 6 Icon main page display layout	
ALT Button	ALT	Touch to link source or function to the ALT button: (CAM/Mute/NAVI/Tuner/EQ/Setup/BT-Music/BT/ DISP/iPod/USB/HDMI/GAA/DVD/AV-IN)	
ALT Software Button	ALT	Touch to link source or function to ALT (HMI) button (CAM/Mute/NAVI/Tuner/EQ/Setup/BT-Music/BT/ DISP/iPod/ USB/HDMI/GAA/DVD/AV-IN)	
Button sounds	Веер	ON / OFF Off = acoustic acknowledgment disabled On = acoustic acknowledgment enabled	
OSD Language	OSD Langu	Tap to change the menu language	
Button Color	Button Col	Tap to alter hard key illumination color to Amber or White	
Wallpapers	Wallpaper	Tap to change the background wallpaper	
Volume Pop-Up	ON ::::	ON / OFF Off = visual volume pop-up disabled On = visual volume pop-up enabled	
Launch Android Auto	Launch Android	Always / Never Always: If the mobile device is connected during operation, Android Auto starts automatically. Never: If the mobile device is connected during operation, Android Auto does NOT start automatically, but the Android Auto icon must be tapped.	

AUDIO SETUP



In the Audio menu page, you can adjust changes around the sound, e.g. Volume of the sources, loudness, bass and treble, etc.. The "Expert Mode" view extends these setting options by additional points.

Function	Icon	Operation	
Audio	Audio	Tap to access and configure audio settings	
Presets	Presets	Tap on one of the presets to change profile (Pop / Classic / Rock etc.) All changes made in the Expert Mode at the Equalizer will be stored under the preset "User".	
Expert Mode	Expert Mode	Tap to enable or disable expert mode, accessing the advanced sound configuration options.	
Volume	Volume 🌓)))	Tap to set initial and source volume levels	
Quick Audio Control	Quick Audio Control	Tap to access quick audio settings (Loudness / Bass Boost etc.) This can also be accessed by long pressing of the Home HOME button.	

VOLUME SETUP



In the Audio menu -> Media Volume, you can customize the basic settings of each source individually.

Function	Icon	Operation	
Media Volume	Media Volume	Media volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off	
TA Volume	TA Volume	TA volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off	
Navi Volume	NAV Volume	NAV volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off	
BT Call Volume	BT Call Volume	BT Call volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off	

Fine adjustment of the volume of all "Gain" sources

Function	Icon	Operation
BT Music Gain	BT Music Gain	Fine adjustment of BT Music volume
FM Tuner Gain	FM Tuner Gain	Fine adjustment of FM tuner volume
DAB Tuner Gain	DAB Tuner Gain	Fine adjustment of DAB tuner volume
USB Gain	USB Gain	Fine adjustment of USB volume
iPod Gain	iPod Gain	Fine adjustment of iPod volume
A/V IN Gain	A/V IN Gain	Fine adjustment of A/V IN volume
DISC Gain	DISC Gain	Fine adjustment of DISC volume
HDMI Gain	HDMI Gain	Fine adjustment of HDMI volume
GAA Gain	GAA Gain	Fine adjustment of GAA volume (Android Auto)

61 Rev.A

QUICK AUDIO SETUP (BAL / FAD / SUBWOOFER / LOUDNESS / BASS BOOST)



In this menu, you can adjust the Balance / Fader, Loudness, Bass Boost and Subwoofer level of the speakers in the vehicle.

Function	Icon	Operation
Balance Left/ Right	L R	7L > 0 < 7R
Fader Front/ Rear	F	7F > 0 < 7R
Loudness	Loudness	ON / OFF
Bass Boost	Bass Boost	ON / OFF
Subwoofer Gain	Subwoofer	-6 < 0 > +6

AUDIO SETUP: EXPERT MODE




In the Audio Setup menu page with the Expert Mode set to "ON", you can change audio relevant settings. Such as Equalizer, Crossover, Navi-Mixer, etc. Please refer to the listings on the following pages.

Function	Icon	Operation
Expert Mode	Mode	Tap to enable or disable expert mode
Volume	Volume	Tap to set start and source volume
Balance/Fader	Balance Fader	Tap to set fader or balance
Equalizer	Equalizer	Tap to set the 10-Band equalizer
X-Over	X-Over	Tap to access crossover settings
Subwoofer	Subwoofer	Tap to set subwoofer settings
Navi-Mixer	Navi-Mixer	Tap to set navi voice output configuration
Quick Audio Control	Quick Audio Control	Touch to make general quick audio settings (Loudness / Bass Boost etc) Can be accessed by long press of the Home HOME button.
Time Alignment	Time Alignment	Tap to adjust the time alignment

Volume Setup: see page 61

AUDIO VOLUME – BASE LEVEL SETUP

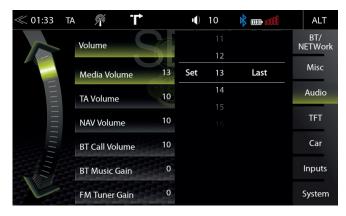


In the Audio menu -> Media Volume, you can customize the basic settings of each source individually.

Function	Icon	Operation
Media Volume	Media Volume	Media volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off
TA Volume	TA Volume	TA volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off
Navi Volume	NAV Volume	NAV volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off
BT Call Volume	BT Call Volume	BT Call volume configuration Set = Start with manually adjusted volume Last = Start with last volume set before switching off

Fine adjustment of the volume of all "Gain" sources

Function	Icon	Operation
BT Music Gain	BT Music Gain	Fine adjustment of BT Music volume
FM Tuner Gain	FM Tuner Gain	Fine adjustment of FM volume
DAB Tuner Gain	DAB Tuner Gain	Fine adjustment of DAB volume
USB Gain	USB Gain	Fine adjustment of USB volume
iPod Gain	iPod Gain	Fine adjustment of iPod volume
A/V IN Gain	A/V IN Gain	Fine adjustment of A/V IN volume
DISC Gain	DISC Gain	Fine adjustment of DISC volume
HDMI Gain	HDMI Gain	Fine adjustment of HDMI volume
GAA Gain	GAA Gain	Fine adjustment of GAA volume (Android Auto)

BALANCE / FADER

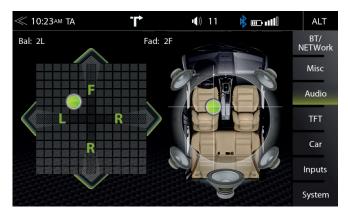


In this Expert Mode menu page, you can adjust the balance and fader. Press and hold the green dot of the crosshair to move sound center position into any desired position.

Function	Icon	Operation
Balance Left/ Right	L R	7L < 0 > 7R
Fader Front/ Rear	F	7F < 0 > 7R
Crosshair	-	Press and hold to move green dot into desired position

64 Rev.A 65 Rev.A


EQUALIZER

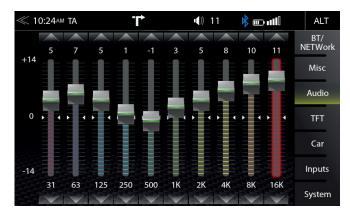

In this Expert Mode menu page, you can set the 10-Band graphical equalizer. Press and hold the individual band level sliders to move it up or down for a level change.

Function	Icon	Operation
		Tap to adjust the desired Band
Band		Touch and hold to change the setting of the selected band

X-OVER SETUP

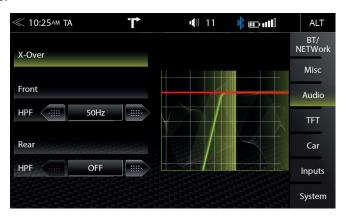

In this Expert Mode menu, you can adjust the High-pass transition frequencies of the front and rear speakers. The factory default is OFF for front and rear speakers.

Function	Icon	Operation
HPF (Front)	Front HPF OFF	Tap to set the high pass filter at front channels OFF (FLAT) 50 Hz/65 Hz/80 Hz/100 Hz/125 Hz/160 Hz
HPF (Rear)	Rear OFF	Tap to set the high pass filter at rear channels OFF (FLAT) 50 Hz/65 Hz/80 Hz/100 Hz/125 Hz/160 Hz


SUBWOOFER SETUP



In this Expert Mode menu, you can adjust Phase, Gain, and Low-pass transition frequencies of the subwoofer. The default settings are Phase 0°, Power ON, LPF 100 Hz.

Function	Icon	Operation
Power	ON ::::	Subwoofer -RCA line-outs (affects the subwoofer line-out only) ON = Volume according to setting. OFF = Mute
LPF	LPF (::::)	Tap to set the low pass filter OFF 160 Hz/125 Hz/100 Hz/80 Hz/65 Hz
Phase	0° [;;;;	Subwoofer ONLY 0/180° phase adjustment
Gain	Gain	Touch to set the GAIN level (same as in Quick Audio Control) -6 <> +6

TIME ALIGNMENT

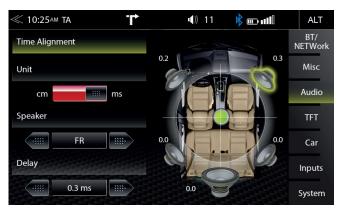


In this menu you can set the time delay correction for the loudspeakers in your vehicle.

Function	Icon	Operation
Unit	$\triangleleft \triangleright$	Selection of desired unit ms = time cm = distance
Speaker	$\triangleleft \triangleright$	Touch to select the desired speaker (FL / FR / RL / RR / SW)
Delay	« 0.0 »	ms = 0.0 <> 10 in approx. 0.1 ms steps cm = 0 <> 340 in approx. 3 cm steps

The distance between the ears and the speaker system installed in the vehicle varies considerably due to the given arrangement of the factory mounting location. This menu gives you the option to delay the audio signal at each of the speakers so that you have a "center stage" effect.

Set your central listening position. Measure the distance from this position to each speaker. Now you need to add the corresponding delay - depending on the speaker with highest distance - to move the speakers to same distance from selected position. Enter these distance to let all speakers have the same distance. You can fine tune values by "ear" after the distances from listening position to each speaker have been entered, simply by adjusting the left front speaker delay until center stage position is reached.



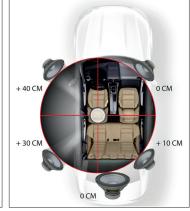

68 Rev.A 69 Rev.A

NAVI-MIXER SETUP



In this Expert Mode menu page, you can adjust audio ducking or mute of audio and video source playback by nav route guidance voice. Secondly, you can adjust if the route guidance voice will be transmitted only via the left front speaker (driver side) or via both front speakers. Works only for ZENEC navigation software.

Function	Icon	Operation
Mute Media Sources for Navi Voice Announcement	ON ::::	ON / OFF OFF = Ducking of media playback during route guidance voice announcements ON = Media playback is fully muted during route guidance announcements
Navi Voice Channel	Fro	All = all speaker Driver = only at driver's speaker side Front = only at speakers front left and right (Driver / Front / All, conditional)

TFT DISPLAY CONFIGURATION



In the TFT Setup menu you can make screen settings that control the day/night brightness of the TFT LCD display screen. This will only work with microSD card from the ZENEC navigation software bundle (Z-E3756-SDFEU).

Function	Icon	Operation
TFT configuration	TFT	Tap to adjust TFT display configuration
TFT Control	;; Navi	Tap to select the brightness control mode: Navi = Day/Night brightness is controlled by the navigation system. Car = Day/Night brightness is controlled by vehicle illu voltage
TS-Brightness Day	29	Day adjust range 0 ~ 30
TS-Brightness Night	8	Night adjust range 0 ~ 30
TS-Auto Standby	::::: OFF	Tap to enable or disable TFT Auto Standby function and Auto Screen shutdown. TFT goes into standby after selected time.

i NOTE

Using the DISP button you can set the display brightness to three levels (\bigcirc 100% \rightarrow 50% \rightarrow 0% \supset).

70 Rev.A 71 Rev.A

CAR (VEHICLE) SETUP



In the Car Setup menu, you can set how the ZENEC device interacts with optional components such as cameras and parking assist inside the vehicle. In addition, it can be defined whether the vehicle is a right or left-hand drive model.

Function	Icon	Operation
Car (vehicle)	Car	Tap to access vehicle configurations
Park Assist	CAM	Tap to set the parking aid display source. CAM / OFF CAM = Camera On OFF = Camera Off
Reverse Audio Assist	MUTE Audio	Touch to set the muting function when parking aid is active. OFF / reduced Volume / CAM Audio / MUTE Audio
Reverse CAM Logic	CAM-1	Tap to set camera switching logic. CAM-1 • Direct camera 1 CAM-2 • Direct camera 2 CAM-3 • Direct camera 3 Mode-1 • Auto-switching function between CAM-1 and CAM-3 Mode-2 • Auto-switching function between CAM-1 and CAM-2
Reverse CAM Off Delay	OFF ::::	Tap to set the Camera off delay time
Driver Position	Left-hand	Tap to set either Right-hand-drive or Left-hand-drive vehicle

INPUT SETUP



In the Input Setup menu, you can adjust the image settings of each connected camera channel, such as reverse cameras. Contrast, brightness, color saturation and hue can be adjusted.

Function	Icon	Operation
Inputs	Inputs	Tap to adjust image setup configuration of connected external video sources (e.g. rear view camera., etc.)
Brightness	9	-10 to +10
Contrast	0	-10 to +10
Saturation	1	-10 to +10
Hue	0	-10 to +10

72 Rev.A 73 Rev.A

SYSTEM SETUP



In the System Setup menu page, you can make various system settings, such as: Adjust the Clock Time, Load Factory settings, initiate Software Updates or set a Password.

Function	Icon	Operation
System	System	Tap to access various system settings
SW Versions Info	SW Version	Tap to access detailed software version information
Load Factory	V	Tap and confirm to reset the ZENEC system to factory default
Clock & Date Setup	Clock Time	Tap to adjust clock time
Software Update	V	Tap and confirm to initiate a software update. www.zenec.com → Support → Softwareupdates
Navigation Installation	V	Tap and confirm to carry out a GPS navigation software update or a new installation of the navgation software.
Password Function	ON	OFF = password protection disabled ON = password protection enabled
Password	Password	Tap and confirm to store a password
Export to USB	V	Tap and confirm to save your full profile settings to external data media (USB). (FAT32 formatting)
Load from USB	\	Tap and confirm to load your saved device profile settings from external media carrier (USB) back into the ZENEC system

CLOCK & DATE SETUP



In the System Setup menu page under Clock & Date, you can set the format, change the displayed time and select the time sync source (system time or GPS) for the time display.

Function	Icon	Operation
Clock Time Sync. Mode	Clock Time Sync. Mode	Tap to change the clock time sync. mode - NAV Sync. = automatic synchronisation by navigation (Manual adjustments such as clock time and time zone not possible) - RTC Sync. = automatic synchronisation by system RTC (Manual adjustments possible)
Clock Format	Clock Format	Tap to change the clock format
Set Time	Set Time	Tap to change time if sync is "RTC Sync."
Time Zone	Time Zone	Tap to change time zone if sync is "RTC Sync."
Set Date	Set Date	Tap to change the date (Year: Month: Day)

i NOTE

"RTC" means "Real Time Clock", a internal Quartz generated time signal.

74 Rev.A 75 Rev.A

SOFTWARE VERSION



In the System Setup menu page under SW version, you will see the currently installed software versions with detailed version info for MCU, OS and APP etc., including a simple Short Software Version.

Function	Icon	Operation
System	System	Tap to access this view
SW Version	SW Version	Displays the current software version information

PASSWORD





In the System Setup menu page under Password function, you can activate and deactivate the password protection for the device.

Function	Icon	Operation
Password Function	ON ##	OFF = password protection disabled ON = password protection enabled
Password	Password	Tap and confirm to store a password* Standard password "12345"
Input Keypad	Input security Pa	Enter the desired password

▲ CAUTION

* If you protect you ZENEC system with a Passwort make sure, you have access to this password anytime.

Lost or forgotten Passwords require the device to be uninstalled and sent in to ZENEC Service Centre. Device unlocking is not a service which is free of charge.

INSTALLATION NOTES

⚠ CAUTION

- The installation of the ZENEC system should be carried out by an authorized installer. Specific knowledge and tools are required to do the installation. Incorrect installation can cause damage to the vehicle and the ZENEC system.
- Correct functioning can only be guaranteed when you use the ZENEC original accessories
 included in the kit or those optionally available. The ZENEC system and the original accessories
 must under no circumstances be modified or altered in any way. Inappropriate actions can
 cause damage to the vehicle and the ZENEC system.

i NOTE

- The ZENEC Z-E3756 is equipped with an integrated DAB+ receiver. To make use of this you
 will need a suitable DAB antenna mounted to the vehicle (not included in kit) that must be
 connected to the ZENEC system.
- If the target vehicle is already equipped with an original DAB antenna, it is still possible to use it in combination with the ZENEC system.
- Software updates to the ZENEC system are installed with a USB memory device. Therefore
 when fitting the system make sure that the USB connection of the ZENEC system will still be
 accessible later (installation of USB extension cable or USB hub).
- If you have questions or problems relating to the ZENEC system, please contact the dealer from whom it was purchased.

REMOVAL WORK AND PREPARATION

i NOTE

- 1. Remove the ignition key and keep it outside the car until the installation is finished.
- 2. Please wait for approx. 10 minutes until the CAN bus system is completely shut down, before you start with the uninstallation of the original device.
- 3. Start with the uninstallation of the original device.
- Please switch on the ignition only, when all installation steps are done and the ZENEC system is completely mounted.

i NOTE

- Make sure that all connectors at the rear of the ZENEC system have sufficient room and are not bent.
- Connectors without a retaining mechanism must be additionally secured with insulating tape.


OVERVIEW INCLUDED ACCESSORIES




No.	Article	Qty
1	Mounting frame	1
2	Remote control	2
3	Phillips screws	4
4	Parking brake cable	1
5	GPS antenna with metal mounting plate and double sided adhesive pad	1
6	USB extension cable	2
7	Bluetooth microphone with mounting accessories	1
8	24-pin connection cable (4.2, M-Zone, AV-IN)	1
9	20-pin connection cable (Mic, Cam, IR-IN)	1
10	ISO-DIN main harness	1
11	Main device user manual	2
12	FM antenna adapter ISO/DIN	1
13	Navigation microSD card with adapter (without fig.)	1


78 Rev.A 79 Rev.A

CONNECTION DIAGRAM Z-E3756

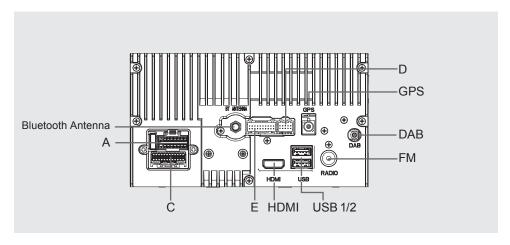

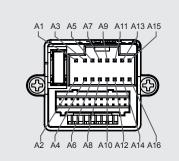


A1	KL 31 / Power GND
A2	KL 30 / Permanent +12V PWR
А3	KL 15 / Switched +12V PWR
A4	Illumination
A5	Switched +12V amp PWR*
A6	Parking
A7	Switched +12V antenna PWR
A8	Reverse gear
A9	Loudspeaker rear right (+)
A10	Loudspeaker front right (+)
A11	Loudspeaker right (-)
A12	Loudspeaker front right (-)
A13	Loudspeaker rear left (+)
A14	Loudspeaker front left (+)
A15	Loudspeaker rear left (-)
A16	Loudspeaker front left (-)

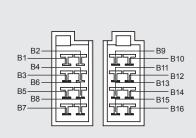

B1	N.A.
B2	N.A.
B3	KL 30 / Permanent +12V PWR
B4	N.A.
B5	Illumination
B6	Switched +12V antenna PWR
B7	KL 31 / Power GND
B8	KL 15 / Switched +12V PWR
B9	Loudspeaker rear right (-)
B10	Loudspeaker rear right (+)
B11	Loudspeaker front right (-)
B12	Loudspeaker front right (+)
B13	Loudspeaker front left (-)
B14	Loudspeaker front left (+)
B15	Loudspeaker rear left (-)
B16	Loudspeaker rear left (+)

CONNECTION DIAGRAM Z-E3756

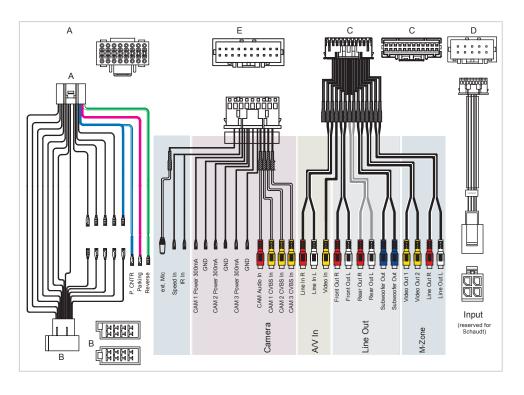

80 Rev.A 81 Rev.A

GENERAL

ABBREVIATIONS

Abbreviation	Description
A2DP	Manufacturer-independent Bluetooth® technology allowing audio signals to be transmitted (Advanced Audio Distribution Profile)
AF	Alternative frequency
CAN-Bus	The CAN bus (Controller Area Network) is a serial bus system for the communication of control units in a vehicle
DAB / DAB+	Transmission standard for terrestrial reception of digital radio (Digital Audio Broadcasting)
DSP	The digital signal processor is used for the processing of digital signals (e.g. audio or video signals)
EQ	Equalizer
FAT32	Formatting format for digital media (File allocation table 32-bit)
UKW/FM	Transmission standard for terrestrial reception of very high frequency analog radio (UKW)
GAA	Google Android Auto
GPS	Global navigation satellite system for position fixing (Global Positioning System)
GSM	Global mobile radio network standard for fully digital mobile radio networks (Global System for Mobile Communications)
ID3-Tag	ID3 is a metadata container most often used in conjunction with the MP3 audio file format. It allows information such as the title, artist, album, track number, and other information about the file to be stored in the file itself.
microSD	Compact flash memory
REG	Regional station
SSP	Secure Simple Pairing (for Bluetooth devices)
TA	Traffic Announcement (RDS service)
USB	A USB connection is a serial bus system for connecting a device to other devices (Universal Serial Bus).

STATUTORY RIGHTS AND WARRANTY

Dear customer,

Please read the warranty terms below carefully.

Should your ZENEC product require warranty service, please return it to the retailer from whom it was purchased or the distributor of your country. Do not send-in any product to ZENEC directly.

This ZENEC product is protected against defective materials and/or improper workmanship by a manufacturer warranty for the period of 3 years from date of purchase at retail, to the original buyer. The statutory consumer protection regulation ("EU statutory warranty") remains unaffected by the provided manufacturer product warranty.

For the treatment of warranty related claims, the dealer / importer needs to provide a valid product serial number and the original slip of purchase or the invoice, showing the purchase date.

Not covered by the manufacturer warranty are damages due to:

- 1. Unauthorized or unapproved installation, incorrect audio or mains connection(s).
- 2 Defects caused by exposure of product to moisture, water and organic fluids ("solvents"), excessive heat and prolonged exposure to sun rays as well as excessive dirt or dust.
- 3. Mechanical defects caused by accidents, fall or impact.
- 4. Damage due to unauthorized repair attempts and modifications of product not explicitly authorized by the manufacturer.
- 5. Damage caused by normal "wear and tear" over time.

This warranty is limited to the repair or the replacement of the defective product at the manufacturer's option and does not include any other form of damage, whether incidental, consequential or otherwise.

Damages caused by improper packaging during transport of product to dealer or importer are not covered under warranty. Any compensation claims of sequential damages to auxiliary components or components in the dashboard caused by the device directly or indirectly, are excluded. Not covered by the manufacturer are consequential costs for the handling of product to conduct warranty service labor. For example the un-installation and re-installation of devices to cure a hardware failure or defect.

EU Legal Representative: ACR S & V GmbH \cdot Industriestraße 35 \cdot D-79787 Lauchringen \cdot Germany ZENEC by ACR AG \cdot Bohrturmweg 1 \cdot CH-5330 Bad Zurzach \cdot Switzerland

www.zenec.com



82 Rev.A 83 Rev.A

© Copyright 2018

RevA / copy deadline: Q1-2018

English
Manufacturer: ACR AG · Bohrturmweg 1 · CH-5330 Bad Zurzach · Switzerland
EU Legal Representative: ACR S & V GmbH · Industriestraße 35 · D-79787 Lauchringen · Germany